


## ME38 Series 915nm 1000W Uncooled Multimode Laser Diode Module

TY-ME38-0915+/-10NM-1.0kW-25C-0.22NA

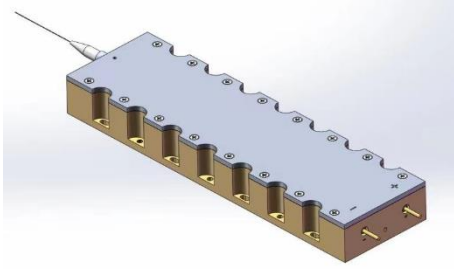

SkyEra delivers TY-ME38-0915+/-10NM-1.0kW-25C-0.22NA diode lasers employing professional coupling technology, that enjoy multiple advantages, e.g., compact design, stable output power, high power, high efficiency and convenient packaging. These laser diode modules can provide solutions for fiber laser applications and direct suppliers.

The performance and aging tests have been performed upon the production line to guarantee reliable, stable and long lifetime of products. To provide customers with high-quality, high cost performance products is the company's goal.

### Key Parameters:

- Based on single fire spot laser module
- High output power 1.0kW
- High stability
- 0.22NA 400μm core multimode fiber
- Parallel weld 2-Pin sealed package
- Standard central wavelength 915nm
- RoHS compliance
- High-brightness

### Application:

- pump source
- Material processing


### Specification:

Functional parameters are tested on condition that the heat sink temperature is 25 degree, contact resistance of the component and the heat sink is smaller than 1CM<sup>2</sup> K/W.

Parameter	Min	Typ	Max	Unit	Conditions
Output Power	960	1000	-	W	
Centre Wavelength	-	-	-	nm	
ME38	905	915	925		
Spectral Width (FWHM)	-	4.5	6	nm	
Threshold Current	-	1.5	2.5	A	
Operating Current	-	-	35	A	
Operating Voltage	-	59	62	V	
Convention Efficiency	-	48	-	%	
95% Power	-	0.18	-	NA	
Wavelength shift vs. Temperature	-	0.3	-	nm/°C	
Slop Efficiency	-	33	-	W/A	
Storage Temperature	-30	25	70	°C	Non-Condensing
Operating Temperature	20	25	30	°C	
Fiber Bend Radius	75	-	-	mm	
Core Diameter	-	400/440	-	μm	
1064ISO	-	30	-	dB	1050-1150nm
Numeric Aperture	0.2	0.22	0.24	-	
Fiber length	1.0	1.5	-	M	
Protection Tube	0.9	1.5	1.8	mm	
Fiber Connector	-	SMA905	-	-	

## 2. Dimension Diagram

Unit:MM

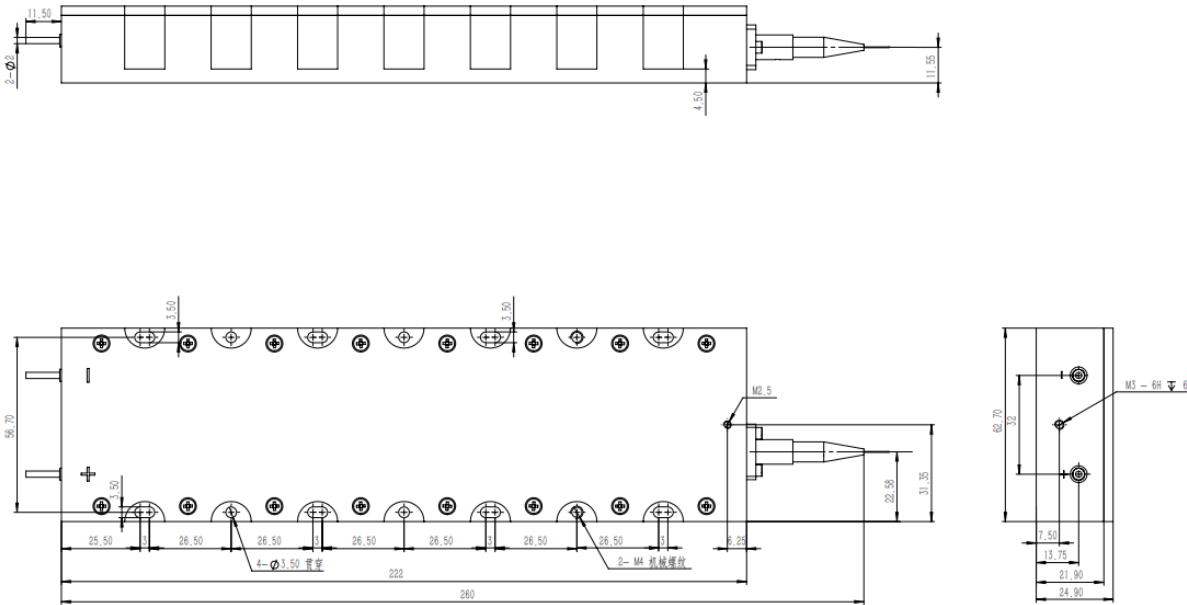

## 3. Instructions

- Avoid eyes or skin exposure to direct or scattered radiation;
- ESD protection is required for transportation, storage and operation; short-circuit protection between pins is required for transportation and storage.
- Please connect pins by solder when operating current is over 6A; solder point should be close to the root of pins with a max soldering temperature at 260°C and a duration less than 10 seconds ;
- Drive constant current power supply by laser and avoid surge while working;
- Operate under rated current and rated power;
- Good heat dissipation is required;
- Please test with coated fiber in order to avoid chip damage by reducing back reflection;
- Seal the optical fiber output connector; otherwise, the optical fiber may fail due to thermal adsorption and contamination.
- Water temperature set  $23 \pm 3^{\circ}\text{C}$ , cooling water flow > 13 L/min; Cooling water pipe diameter is 12mm.
- Operating temperature is  $20^{\circ}\text{C} \sim 30^{\circ}\text{C}$ ;
- Storage temperature is  $-30^{\circ}\text{C} \sim +70^{\circ}\text{C}$ .

