


915nm 260W 200um Uncooled Multimode Laser Diode Module

TY-T320W-915+/-10NM-260.0W-25C-1064-0.22NA

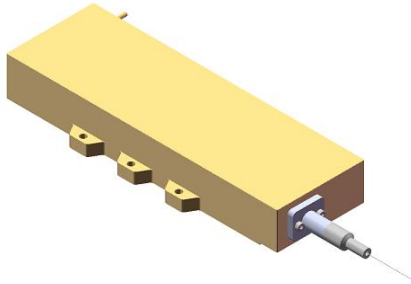

SkyEra delivers diode lasers employing professional coupling technology, that enjoy multiple advantages, e.g., compact design, stable output power, high power, high efficiency and convenient packaging. These laser diode modules can provide solutions for fiber laser applications and direct suppliers.

The performance and aging tests have been performed upon the production line to guarantee reliable, stable and long lifetime of products. To provide customers with high-quality, high cost performance products is the company's goal.

Key Parameters:

- Based on single fire spot laser module
- High output power 200W
- High stability
- 0.22NA 200μm core multimode fiber
- Parallel weld 2-Pin sealed package
- Standard central wavelength 915nm
- RoHS compliance

Application:


- Medical
- Printing
- pump source
- Material processing

Specification:

Functional parameters are tested on condition that the heat sink temperature is 25 degree, contact resistance of the component and the heat sink is smaller than 1CM² K/W.

Parameter	Min	Typ	Max	Unit	Conditions
Output Power	250	260	-	W	
Centre Wavelength	-	-	-	nm	
TY-T320W	905	915	925		
Spectral Width	-	4.5	-	nm	
Threshold Current	-	1.0	-	A	
Operating Current	-	16.5	18.5	A	
Operating Voltage	-	31.5	-	V	
Convention Efficiency	-	48	-	%	
95% Power	-	0.18	-	NA	
Wavelength shift vs. Temperature	-	0.3	-	nm/°C	
Slop Efficiency	-	17.0	-	W/A	
Storage Temperature	-30	-	70	°C	Non-Condensing
Operating Temperature	15	-	55	°C	
Fiber Bend Radius	50	-	-	mm	
Core Diameter	-	200	-	μm	
1064ISO	-	30	-	dB	Optional
Numeric Aperture	-	0.22	-	-	
Fiber length	-	1.5	-	M	
Protection Tube	-	0.9	-	mm	Optional
Fiber Connector	-	CO	-	-	

2. Dimension Diagram

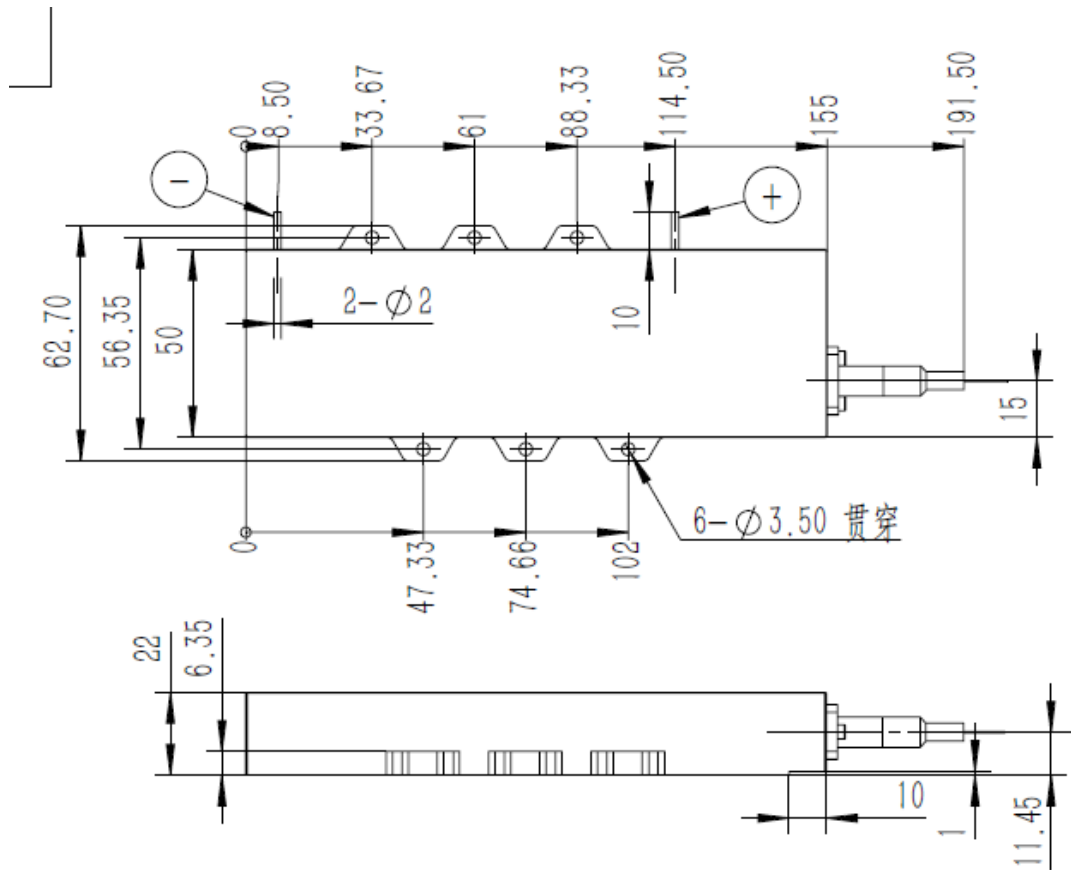

3. Instructions

- Avoid eyes or skin exposure to direct or scattered radiation;
- ESD protection is required for transportation, storage and operation; short-circuit protection between pins is required for transportation and storage.
- Please connect pins by solder when operating current is over 6A; solder point should be close to the root of pins with a max soldering temperature at 260°C and a duration less than 10 seconds ;
- Drive constant current power supply by laser and avoid surge while working;
- Operate under rated current and rated power;
- Good heat dissipation is required;
- Please test with coated fiber in order to avoid chip damage by reducing back reflection;
- Operating temperature is $15^{\circ}\text{C}\sim 35^{\circ}\text{C}$;
- Storage temperature is $-30^{\circ}\text{C}\sim +70^{\circ}\text{C}$

