

60W 825nm Uncooled Single Bar Laser Diode Module

TY-825NM+/-05NM-60.0W-25C-CS



SkyEra delivers TY-825NM+/-05NM-60.0W-25C-CS single bar diode lasers, employing AuSn bonding technology with multiple advantages of low smile, stable output power, high power, high efficiency, long lifetime and high compatibility, and are widely applied in the market.

The performance and aging tests have been performed upon the production line to ensure reliable, stable and long lifetime of products.

To provide customers with high-quality, high cost performance products is the company's goal.

Key Parameters:

- Single Bar sealed package
- High output power 60W
- High stability
- Long lifetime
- Low smile
- AuSn bonding
- RoHS compliance

Application:


- Medical
- Printing
- Industry
- Pumping

Specification:

Functional parameters are tested at the temperature of the heat sink is 25 degree, contact resistance of the component and heat sink is less than 1 CM² K/W. Reduced lifetime if used above nominal operating conditions. A non-condensing environment is required for storage and operation below the ambient dew point.

Parameters	Min	Typ				Max	Unit	Conditions
Output Power	-	60	60	60	60	-	W	
Center Wavelength	-					-	-	
TY-CS	-	825±5	915±10	940±10	975±10	-	nm	
Spectral Width(FWHM)	-	3	3	3	3	-	nm	
Spectral Width (90%)	-	5	5	5	5	-	nm	
Fax-Axis Divergence(FWHM)	-	35	28	28	28	-	°	
Slow-Axis Divergence (FWHM)	-	8	8	8	8	-	°	
Pitch	-	500	500	500	500	-	μm	
Emitter Width	-	150	<100	<100	<100	-	μm	
Wavelength Shift vs. Temperature	-	0.3	0.3	0.3	0.3	-	nm/°C	
Polarization Mode	-	TE	TE	TE	TE	-	-	
Threshold Current	-	10.5	6.0	6.0	6.0	-	A	
Operating Current	-	62	60.0	61.0	62.0	-	A	
Operating Voltage	-	1.85	1.85	1.85	1.85	2.0	V	
Power Conversion Efficiency	-	52.0	52.0	52.0	52.0	-	%	
Slope Efficiency	-	1.15	1.10	1.10	1.10	-	W/A	
Storage Temperature	0	-				55	°C	
Operating Temperature	15	-				35	°C	
Recommended Heatsink Capacity	-	100				-	W	

2. Dimension Diagram

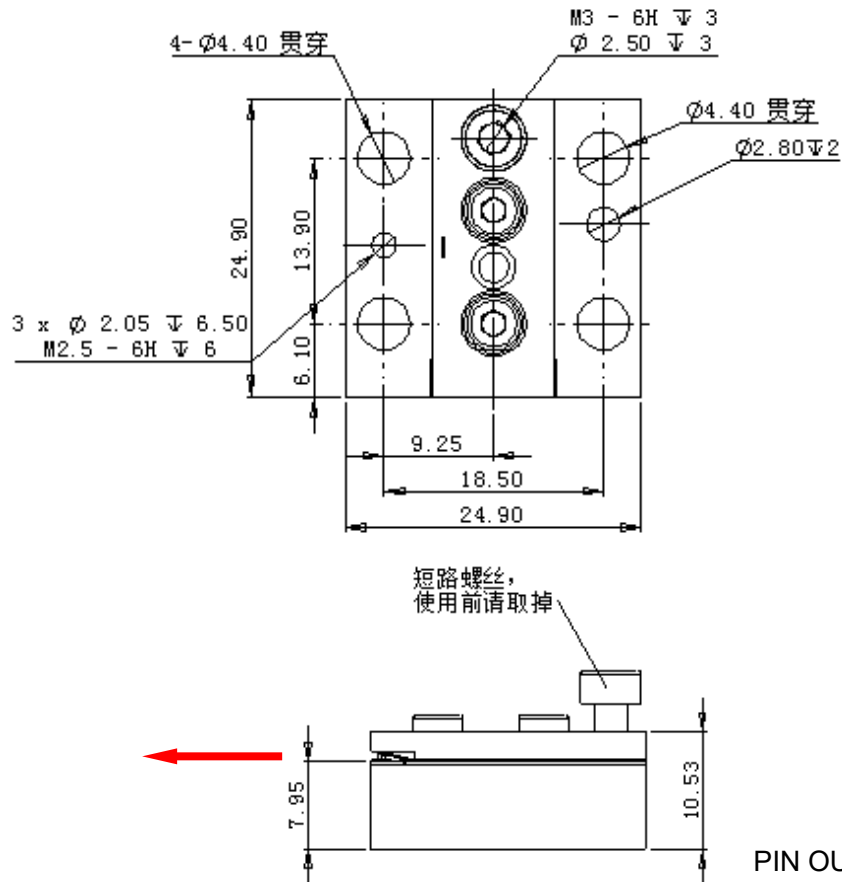

PIN OUT:

PIN

+

-

Description

LD+

LD-

3. Instructions

- Avoid eyes or skin exposure to direct or scattered radiation;
- ESD protection is required for transportation, storage and operation;
- Max soldering temperature is 260°C;
- Drive constant current power supply by laser and avoid surge while working;
- Operate under rated current and rated power;
- Good heat dissipation is required, heat dissipating capacity should be greater than output power ;
- Operating temperature is 15°C~35°C;
- Storage temperature is 0°C~+55°C.

