


976nm 75W DFB Uncooled Multimode Laser Diode Module

TY-975+/-02NM-75.0W-DFB-105-0.22NA-T4S

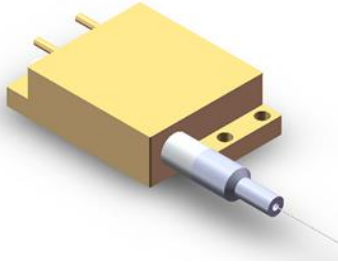

SkyEra delivers TY-975+/-02NM-75.0W-DFB-105-0.22NA-T4S diode lasers employing professional coupling technology, that enjoy multiple advantages, e.g., compact design, stable output power, high power, high efficiency and convenient packaging. These laser diode modules can provide solutions for fiber laser applications and direct suppliers.

The performance and aging tests have been performed upon the production line to guarantee reliable, stable and long lifetime of products.

To provide customers with high-quality, high-cost performance products is the company's goal.

Specification:

Functional parameters are tested on condition that the heat sink temperature is 25 degree, contact resistance of the component and the heat sink is smaller than 1CM² K/W.

Key Parameters:

- Based on single fire spot laser module
- High output power 75W
- High stability
- 0.22NA 105μm core multimode fiber
- Parallel weld 2-Pin sealed package
- Standard central wavelength 976nm
- RoHS compliance
- DFB chip


Application:

- pumping source
- material processing

Parameter	Min	Typ	Max	Unit	Conditions
Output Power	70	75	-	W	
Centre Wavelength	973	975	977	nm	HR @ 1020-1200>20dB, HR @ 1060-1100>30dB
Spectral Width (FWHM)	-	1.2	1.5	nm	0.5nm DPI, 2~Imax
Threshold Current	-	1.5	-	A	
Operating Current	-	25	26.5	A	2~Imax
Edge mode SNR	13	15	-	dB	0.5nm DPI, 2~Imax
Operating Voltage	-	6.4	8	V	
Conversion Efficiency	-	45	-	%	
95% Power	-	0.18	-	NA	
Wavelength shift vs. Temperature	-	0.07	-	nm/°C	
Wavelength shift vs. Current		0.1			
Slop Efficiency	-	3.2	-	W/A	
Storage Temperature	-30	25	70	°C	Non-Condensing
Operating Temperature	15	25	55	°C	
Fiber Bend Radius	37.5	-	-	mm	
Buffer Diameter	-	250	-	μm	
Cladding Diameter	-	125	-	μm	
Core Diameter	-	105	-	μm	
Numeric Aperture	0.2	0.22	0.24	-	
Fiber length	0.9	-	-	M	
Fiber Protection Tube	0.9	-	1.5	mm	
Fiber Connector	-	-	-	-	

2. Dimension Diagram

Unit:MM; undeclared tolerance: $\pm 0.5\text{mm}$.

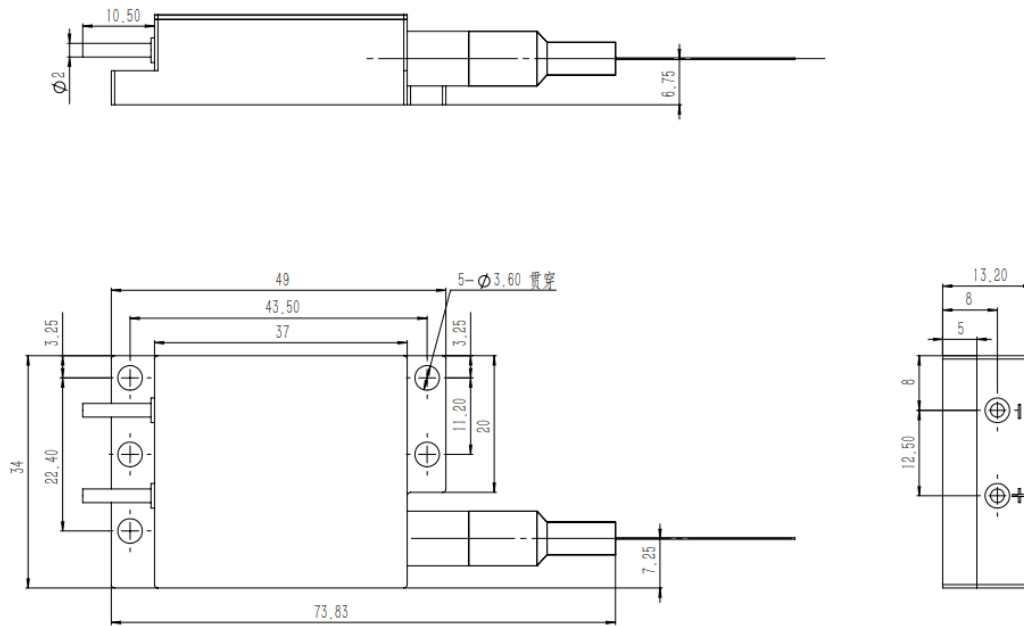


3. Instructions

- Avoid eyes or skin exposure to direct or scattered radiation;
- ESD protection is required for transportation, storage and operation; short-circuit protection between pins is required for transportation and storage.
- Please connect pins by solder when operating current is over 6A; solder point should be close to the root of pins with a max soldering temperature at 260°C and a duration less than 10 seconds ;
- Drive constant current power supply by laser and avoid surge while working;
- Operate under rated current and rated power;
- Good heat dissipation is required;
- Operating temperature is $15^{\circ}\text{C}\sim 55^{\circ}\text{C}$;
- Storage temperature is $-30^{\circ}\text{C}\sim +70^{\circ}\text{C}$.



976-75W-105自锁波激光器光纤耦合模块

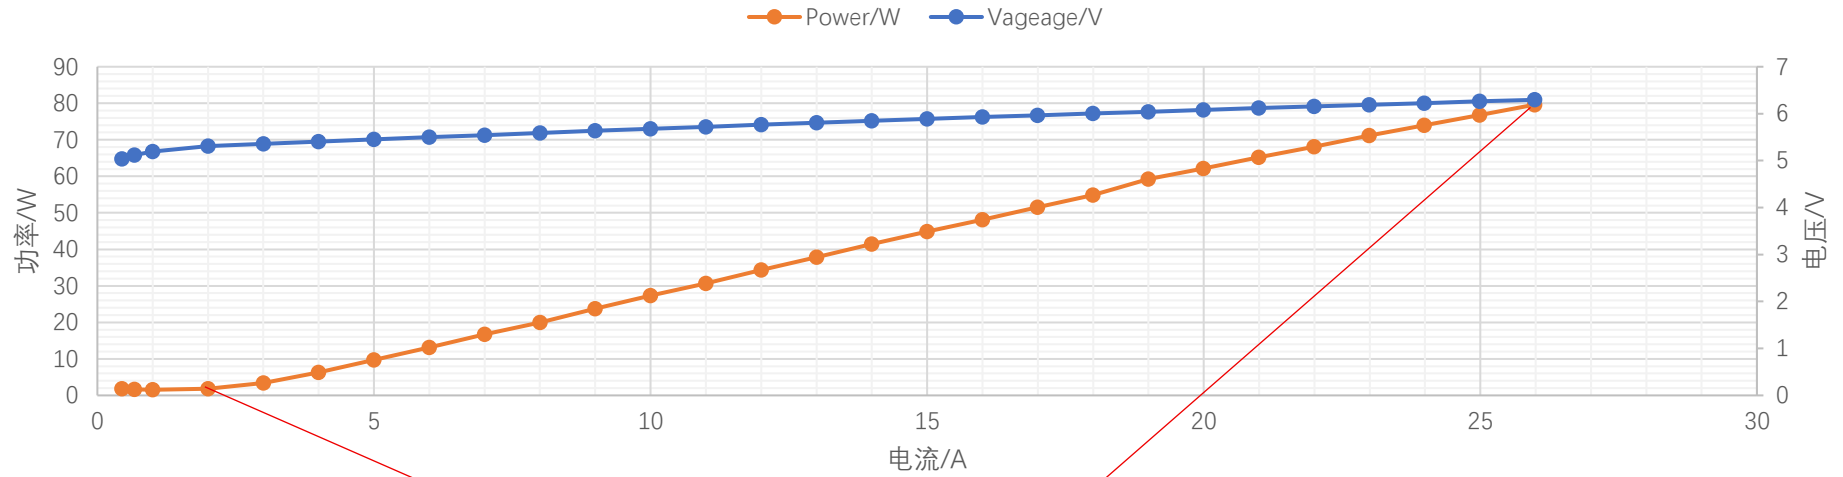

光谱/A

